

**Features of the power supply unit:**

- The output voltage range 44-57VDC
- Power from PoE switch
- The PoE IN input compliant with the IEEE 802.3af standard
- The PoE OUT output compliant with the IEEE 802.3af standard
- Increases Ethernet and PoE power range by 100 meters
- designed for 10Mbit/s and 100Mbit/s network
- LED optical signalization
- protections:
  - surge protection (PoE input)
  - OLP overload protection
  - SCP short circuit protection
- warranty – 2 year from the production date

**1. Technical description.**

**1.1. General description.**

The **EXT-POE1 extender** is a device designed to increase the PoE and Ethernet range by additional 100 meters using UTP Cat. 5/5e cable. The Extender can be powered using a PoE switch or another PoE-compliant device (PoE IN input). The output voltage and data are available at the PoE OUT1 output designed for connecting cameras or other IP devices compliance with IEEE802.3af. The maximum load current is 0,3A. The PoE OUT port are supplied over 4/5 (+) and 7/8 (-) pairs, which, according to the Ethernet standard, are not used for data transmission (data transmission uses 1/2 and 3/6 twisted pairs).

**1.2. Technical parameters.**

**Tabla 1. Technical parameters**

<b>Supply voltage</b>	compliant with 802.3af / (44 ÷ 57VDC)
<b>Current consumption by PSU systems</b>	<30mA
<b>Module power</b>	15,4W max.
<b>Output voltage</b>	compliant with 802.3af
<b>Output current</b>	0,3A
<b>The PoE IN input power supply pairs</b>	1/2 (+) 3/6(-) 4/5 (+) 7/8 (-)
<b>The PoE OUT1/2 output power supply pairs</b>	4/5 (+) 7/8 (-)
<b>Overload protection OLP</b> <b>Short circuit protection SCP</b>	150% ÷ 200% of nominal output current, automatic recovery
<b>LED operation indication</b>	Yellow <b>LAN</b> LED - indicating the LAN connection status Green <b>PoE</b> LED - presence of input/output voltage
<b>Operation conditions</b>	II environmental class, -10°C÷40°C
<b>Dimensions (LxWxH)</b>	81 x 77 x 26 [mm]
<b>Mounting</b>	mounting screws x2 (holes Ø 6mm)
<b>Connectors:</b> <b>- IN/OUT PoE</b>	RJ45 8P8C
<b>Net/gross weight</b>	0,11kg / 0,15kg
<b>Storage temperature</b>	-20°C...+60°C
<b>Declarations, warranty</b>	CE, RoHS, 2 years from the production date

**Table 2. Description of components and connectors.**

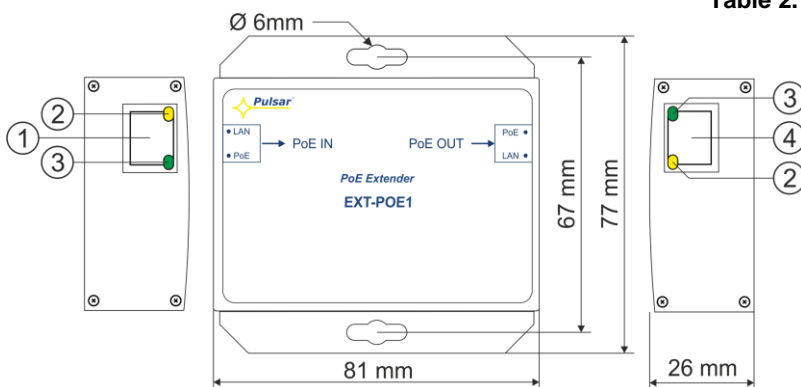


Fig.1. A schematic drawing of the device.

Element no. [fig. 1]	Description
[1]	The PoE IN-input port
[2]	LED LAN (yellow)
[3]	LED PoE (green)
[4]	PoE OUT - output ports

Connection schemes:



Extension of the IP PoE camera range by 100 m

## 2. Installation.

### 2.1. Requirements.

The extender should be mounted by a qualified installer, holding relevant permits and licenses (applicable and required for a given country) for low-voltage installations. The device shall be mounted in confined spaces (in accordance with the 2nd environmental class) with normal air humidity (RH=90% max. without condensation) and the temperature from -10°C to +40°C.

The device is designed for a 10Mbit/s or 100Mbit/s Ethernet network (the so-called Fast Ethernet). **However, it cannot be used in 1Gbit/s networks (the so-called Gigabit Ethernet).** The minimum category cable recommended to connect the extender and the network device is UTP Cat. 5 cable.

### 2.2. Installation procedure.

Connect the network cables (Ethernet) to the RJ45 connectors marked PoE IN and PoE OUT. Connect the network cables (Ethernet + Power) from PoE Switch to PoE-IN RJ45 connector, taking into account current efficiency. Connect devices, to the PoE OUT output e.g. IP cameras.

## 3. Maintenance.

Any and all maintenance operations may be performed following the disconnection of the power supply from the power network. The power supply does not require any specific maintenance procedures, however, in the case of significant level of dust, it should be cleaned with compressed air.



### WEEE MARK

According to the EU WEE Directive – It is required not to dispose of electric or electronic waste as unsorted municipal waste and to collect such WEEE separately.

### Pulsar

Siedlec 150, 32-744 Łapczyca, Poland  
Tel. (+48) 14-610-19-40, Fax. (+48) 14-610-19-50  
e-mail: [biuro@pulsar.pl](mailto:biuro@pulsar.pl), [sales@pulsar.pl](mailto:sales@pulsar.pl)  
http:// [www.pulsar.pl](http://www.pulsar.pl), [www.zasilacze.pl](http://www.zasilacze.pl)